

# Bollard Covers

## How to Measure for a Bollard Cover

1. Measure the exact bollard circumference (distance around the outside of bollard) with a flat tape measure.
2. Divide the circumference by 3.14 to determine the bollard's outside diameter.
3. Find the most suitable bollard diameter range in the product information.

**NOTE:** When purchasing multiple covers, measure each bollard to ensure that you are ordering the correct sizes.

**Formula:**

Bollard Diameter = Circumference ÷ 3.14



**New Pig**

One Pork Avenue  
Tipton, PA 16684-0304

**newpig.com**

North America: **1-800-468-4647**

Europe: **+31 (0)76 596 92 50**

China: **+86-21-400 921 5178**

PIG, PIG logo are registered trademarks in USA and other countries. See [tm.newpig.com](http://tm.newpig.com)

UK: **0800 919 900**

Outside North America: **+1-814-684-0101**

502696 / 357462