 



# PIG Carpet Protection Runner with Adhesive Backing Installation and Maintenance Guide

## Instructions

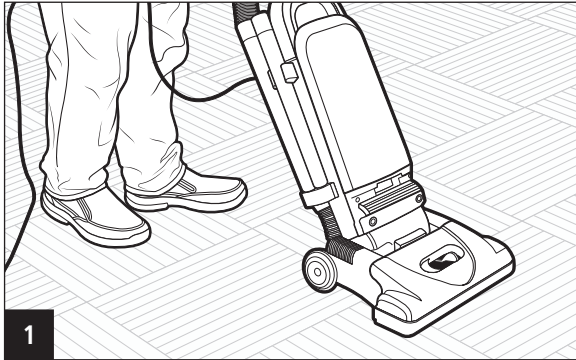


### Step 1 — Prepare the Base Carpet

 Vacuum the base carpet thoroughly to remove dirt and debris so the runner will properly adhere to the surface below.

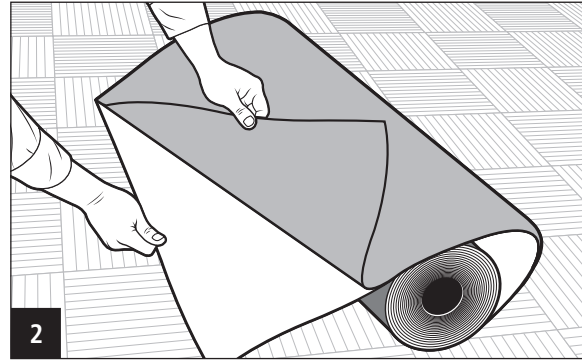


### Step 2 — Position the Runner

 Pull 12"–18" of release paper away from adhesive back. Press the leading edge of the runner against the carpet to secure it.

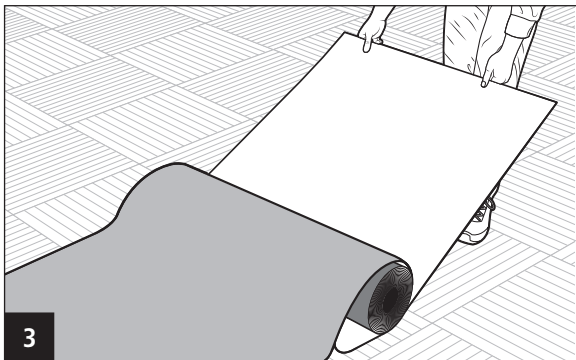


### Step 3 — Roll It Out

 Pull release paper from the bottom of the runner and roll it out to the desired length.

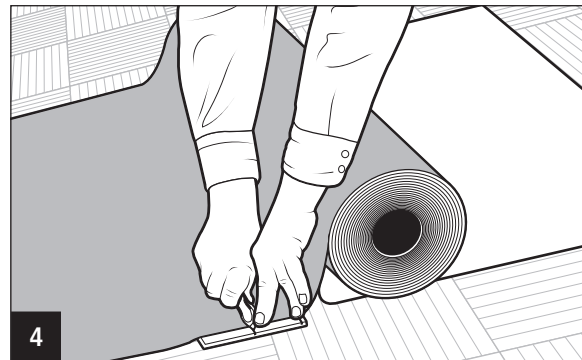


### Step 4 — Cut to Size

 Position the Installation Board under the runner to keep it from shifting and cut with the Safety Knife.

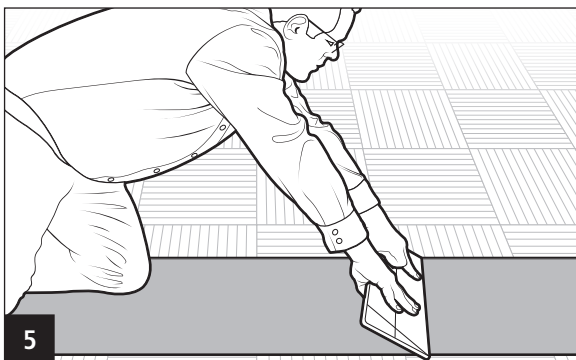

### Step 5 — Smooth Into Place

 Smooth the runner into place using the Installation Board.

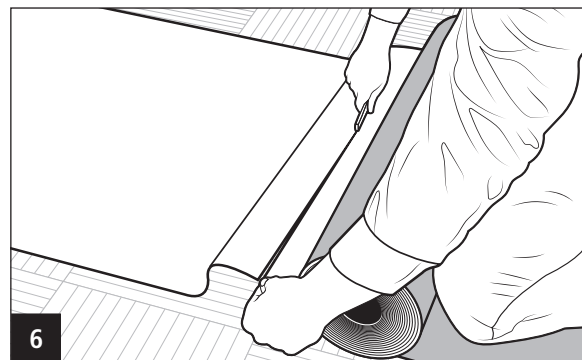

### Step 6 — Trim Release Paper

Trim excess release paper from the roll with the Installation Board and Safety Knife. Recycle release paper or dispose of properly.

# PIG Carpet Protection Runner with Adhesive Backing Installation and Maintenance Guide

## Care and Maintenance

### Everyday Cleaning (fig. A)

Vacuum daily, particularly in high-traffic areas, to remove dry soils and debris. Spot clean spills and stains as they occur. Walking on a soiled carpet runner drives the particles below the surface where they're more difficult to remove and can damage carpet fibers — shortening the life of the runner.

 
 
 
### Deep Cleaning (fig. B)

Deep clean runner with a rug scrubber or carpet extractor if it begins to stain or show grime that vacuuming doesn't remove. Use clean, hot water or the recommended carpet cleaner for your machine. If using a mop, simply wet the runner with clean, hot water and extract the water and soil with a shop vac. Always extract excess water to prevent loosened soils from resettling into the runner.

### ! Removal & Changeouts (fig. C)

Replace runner when it shows obvious wear or the bond with base carpet weakens.

To remove, peel up a corner and peel back until you can grip the runner with both hands or use the Removal Tool to provide an extra-firm grip. Pull up the runner in a smooth, continuous motion, inching backwards as you go. For longer lengths, fold or roll the runner as you remove it. Deep clean the base carpet before installing a new runner.

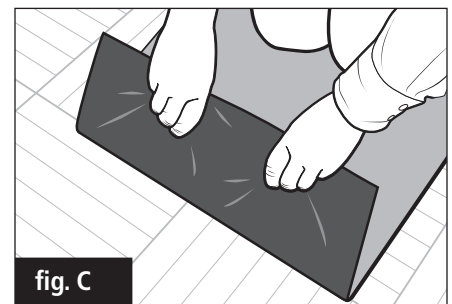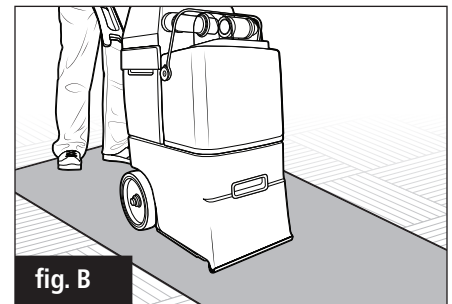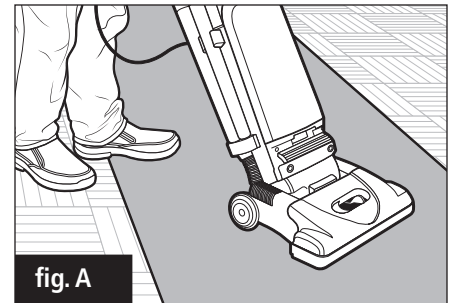

**New Pig**

One Pork Avenue  
Tipton, PA 16684-0304

**newpig.com**

North America: **1-800-468-4647**

Europe: **+31 (0)76 596 92 50**

China: **+86-21-400 921 5178**

PIG, PIG logo are registered trademarks in USA and other countries. See [tm.newpig.com](http://tm.newpig.com)

UK: **0800 919 900**

Outside North America: **+1-814-684-0101**

360006/ 166089