

# PIG Water Hog

## Instructions


---

1. Make sure the diameter of your tank opening is big enough to insert and remove the Water Hog without resistance.
2. Extinguish cigarettes or any other burning materials before opening the fuel tank.
3. Hold the retrieval cord and slowly lower the Water Hog into the tank. Allow several minutes for the Water Hog to sink.
4. Be sure the retrieval cord length will allow the Water Hog to lie flat on the tank bottom. (This is where the water will be.) Shorten the retrieval cord to remove excess slack.
5. Attach the retrieval cord to the underside of the fuel cap or any location that still allows the cap to be replaced.
6. When the Water Hog is fully saturated, remove it from the fuel tank. Saturation will be indicated when the nylon inner bladder expands tightly against the outer casing. Saturation level should be checked monthly and replaced every three months regardless of saturation.
7. Install the Water Hog so that it will not obstruct the fuel outlet or sending unit. **THIS IS ESPECIALLY IMPORTANT IN MOVING VEHICLES.**

**NOTICE:** Alcohol-based fuel additives designed to disperse water reduce the effectiveness of the Water Hog.

**DISPOSAL NOTICE:** Used absorbents can be considered hazardous and must be disposed of in compliance with local, state and federal regulations. For information on disposal options, call New Pig.

**CAUTION:** Not to be used with on-road passenger vehicles, tanks with antisiphon mechanisms or tanks with fill necks.

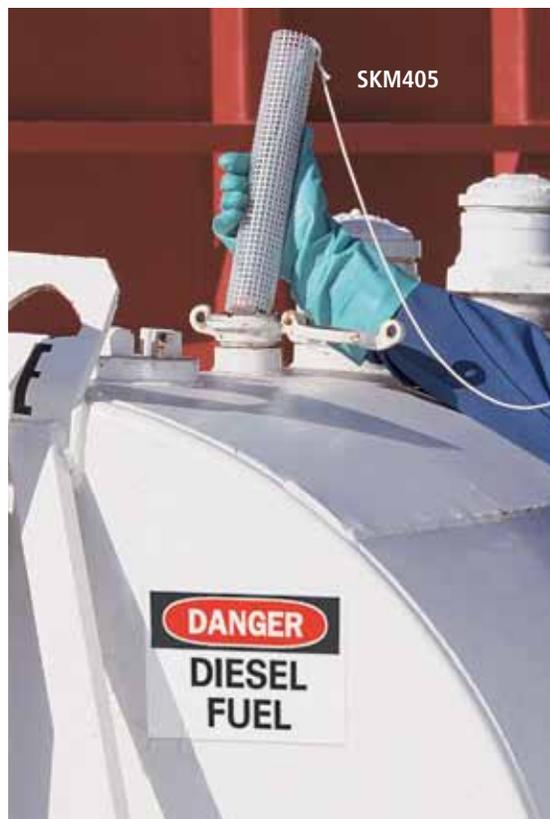

The PIG Water Hog contains a superabsorbent polymer that will absorb 200 times its weight in water from the bottom of your fuel tank, providing you with uncontaminated fuel for work and recreation.