
# Quick Start Installation Guide



# **Installation**

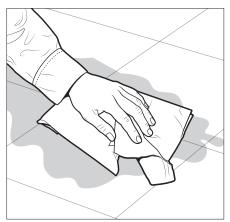

# 1. Prepare Floor

Clean and dry your floor to remove debris so Grippy Mat will properly adhere.




### 2. Roll Out Mat & Cut to Size

Position the roll so it appears straight. Unroll precut mats or unroll and cut to size using the Safety Knife and Installation Board.



#### 3. Stick It Down

Smooth out mat and press it into place using the Installation Board.

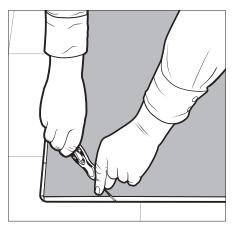

### 4. Trim Corners

Cut angled corners to reduce lifting using the Safety Knife and Installation Board.

# **Care & Maintenance**



## **Everyday Cleaning**

Sweep, mop, vacuum or scrub according to your protocols. Daily cleaning will not affect custom-printed mats.




## **Deep Cleaning**

Deep clean and remove stains with a wet vac, extractor or Rug Doctor®— this will not affect custom-printed mats.



# **Handling Excess Water**

Excessive water, rain, snow or slush should be removed using a wet-vac, Rug Doctor® or extractor for best performance.

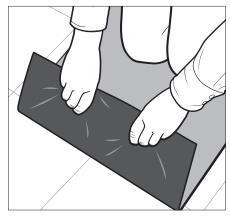

# Removal & Changeouts

Replace mat when it shows obvious signs of wear or a weakened bond to the floor. Peel up a corner and pull in a smooth motion.



One Pork Avenue, Tipton, PA 16684-0304