

PIG Collapse-A-Tainer Spill Containment Berm

Instructions

1. Take the bulkhead fitting assembly and remove the reverse-threaded hex nut plastic washer and rubber washer.
2. On the outside, non-traffic side of the berm, place the plastic washer in the lower corner and trace with marker or pencil (**fig. A**).
3. Place a hard cutting surface under the circle you traced.
4. Using a utility knife, carefully cut out the circle. Be sure to wear cut resistant gloves (**fig. B**).
5. With washers removed from the bulkhead fitting, wrap the threads with PTFE tape.
6. Place rubber gasket back onto bulkhead fitting.
7. From the inside of the berm, slide the bulkhead fitting through the hole (**fig C**).
8. On outside of berm, place plastic gasket on the bulkhead fitting and tighten the hex nut (reverse threads) using the hex wrench (**fig. D**).
9. Wrap threads of ball valve with PTFE tape and thread into inside threads of bulkhead fitting (**fig E**). (Ball valve is closed when handle is perpendicular and open when parallel. Add garden hose for draining if desired.)

Tools and Hardware required

- (1) Bulkhead Fitting (Included)
- (1) Ball Valve (Included)
- (1) 3" Hex Wrench (Included)
- Utility Knife (Not Included)
- PTFE Tape (Not Included)
- Cut Resistant Gloves (Not Included)
- Hard Cutting Surface (Not Included)

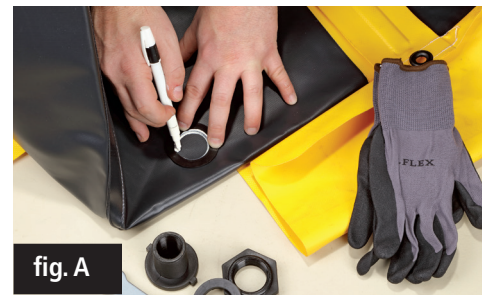


fig. A

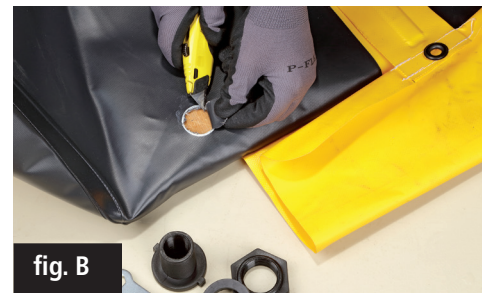


fig. B

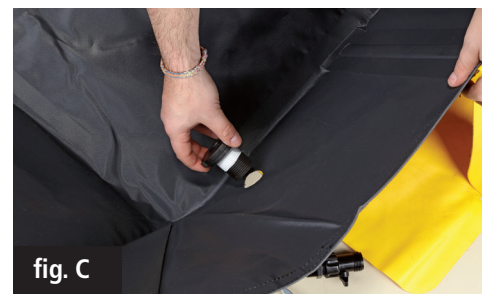


fig. C



fig. D

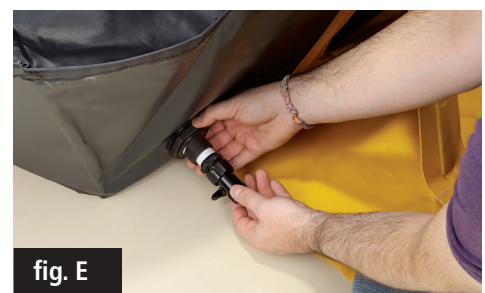


fig. E



New Pig

One Pork Avenue
Tipton, PA 16684-0304

newpig.com

North America: **1-800-468-4647**

Europe: **+31 (0)76 596 92 50**

China: **+86-21-400 921 5178**

PIG, PIG logo are registered trademarks in USA and other countries. See tm.newpig.com

UK: **0800 919 900**

Outside North America: **+1-814-684-0101**

502836 / 359525