

# PIG Mercury Spill Vacuum Kit

## Instructions

**NOTE:** This product is only effective for elemental (metallic) mercury.

1. Always wear proper personal protective equipment.
2. Insert one vial onto the nozzle of the mercury hand pump vacuum.
3. Extend flexible tubing. Place stainless steel tip into mercury spill droplets and depress the lever on the hand pump.

**NOTE:** For the most efficient operation, do not hold the hand pump vacuum higher than necessary above the mercury spill. Do not fill the collection tube closer than 1/2" below grommet. If necessary, use the scoop/spatula to help gather small mercury droplets.


4. When collection is complete, extend the tube above the pump and depress the lever on the hand pump to evacuate any remaining mercury.
5. After mercury has been collected into the mercury collection vial, carefully remove it from the nozzle of the hand pump.
6. Cut approximately 6" of butyl rubber tape and cover grommet on mercury collection vial.
7. Use PIG Mercury Cleanup Wipers to wipe remaining residue with disposable wipers.
8. Place used mercury collection vial, scoop/spatula, disposable gloves, and used wipes into provided disposal bag.
9. Place hand pump into empty plastic zip closure bag provided. This will minimize potential for cross-contamination.

**DISPOSAL NOTICE:** Used material can be considered hazardous and must be disposed of in compliance with local, state, and federal regulations.

For additional questions or information, contact New Pig Technical Services at 1-800-HOT-HOGS (468-4647).

**NOTE:** Appropriate personal protective equipment (PPE) should be worn when treating any hazardous spills.

**STORAGE:** Keep in a cool, dry place.

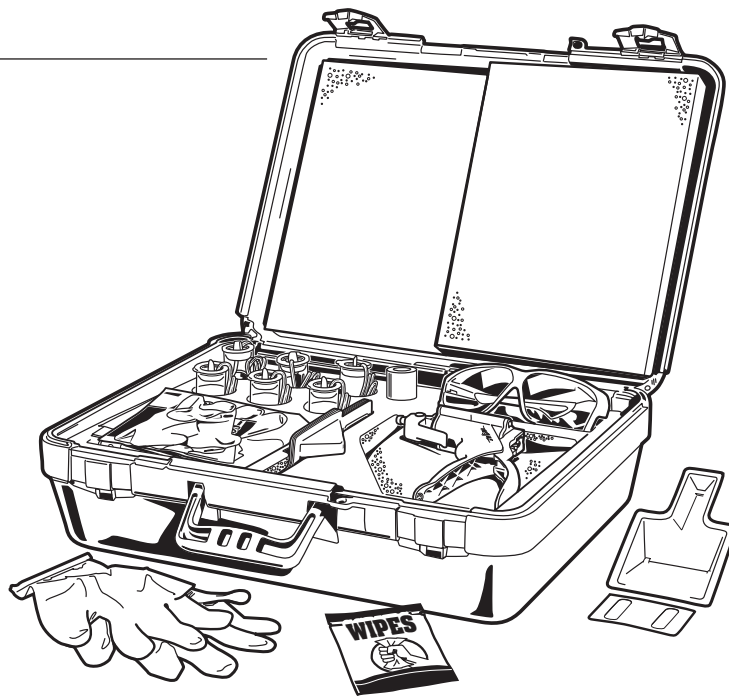

**New Pig**

One Pork Avenue  
Tipton, PA 16684-0304

**newpig.com**

North America: **1-800-468-4647**

Europe: **+31 (0)76 596 92 50**

China: **+86-21-400 921 5178**

PIG, PIG logo are registered trademarks in USA and other countries. See [tm.newpig.com](http://tm.newpig.com)

UK: **0800 919 900**

Outside North America: **+1-814-684-0101**

166121/363040