

Chemical Compatibility Guide for: SHOWA CS721 Nitrile Coated Gloves

The guide on the following page(s) was provided by the supplier.
New Pig Corporation assumes no responsibility, obligation, or
liability in conjunction with the use or misuse of the information.



New Pig

One Pork Avenue
Tipton, PA 16684-0304

newpig.com

North America: **1-800-468-4647**

Europe: **+31 (0)76 596 92 50**

China: **+86-21-400 921 5178**

PIG, PIG logo are registered trademarks in USA and other countries. See tm.newpig.com


UK: **0800 919 900**

Outside North America: **+1-814-684-0101**



CS721

Material NBR LENGTH 14 in. / 350mm

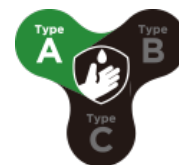

CHEMICAL PERMEATION

CHEMICAL NAME	CAS NUMBER	BDT	
		TTL ASTM F739	INT ASTM F1383
Formaldehyde 37%	50-00-0	>480	>240
2-Hydroxypropionic acid 85%	50-21-5	>480	>240
Carbon Tet	56-23-5	>120	>240
Urea (s) 99%	57-13-6	>480	>240
Urea (s) 62%	57-13-6	>480	>240
Urea (s) 35%	57-13-6	>480	>240
1,2-Propanediol	57-55-6	>480	>240
Diethyl Ether	60-29-7	1-5	1-5
Aminobenzene	62-53-3	>30	>60
Ethanol	64-17-5	>120	>240
Formic Acid 90%	64-18-6	1-5	NT
Acetic Acid 5%	64-19-7	>480	>240
Acetic Acid 10%	64-19-7	>480	>240
Acetic Acid 50%	64-19-7	>480	>240
Acetic Acid 99%	64-19-7	>30	NT
Acetic Acid 84%	64-19-7	>60	NT
Acetic Acid 25%	64-19-7	>480	>240
Benzoic Acid (s) 99%	65-85-0	>480	>240
Methanol	67-56-1	>30	>60
2-Propanol	67-63-0	>480	>240
2-Propanone	67-64-1	1-5	1-5
Chloroform	67-66-3	1-5	1-5
Dimethylsulfoxide (DMSO)	67-68-5	>60	>60
Dimethyl Formamide	68-12-2	6-10	>10
Salicylic acid (s) 99%	69-72-7	>480	>240
n-Propanol	71-23-8	>240	>240

Butanol	71-36-3	>480	>240
Alcohol, Amyl	71-41-0	>480	>240
Benzene	71-43-2	1-5	6-10
Iodide, Methyl	74-88-4	<1	<1
Methylamine 40%	74-89-5	>10	>30
ETHYLAMINE 70%	75-04-7	1-5	1-5
ETHYLAMINE 97%	75-04-7	<1	<1
Acetonitrile	75-05-8	1-5	1-5
Acetaldehyde	75-07-0	1-5	1-5
Chloride, Methylene	75-09-2	1-5	1-5
Carbon Disulfide	75-15-0	6-10	6-10
1,2-Epoxy Ethane (gas)	75-21-8	<1	<1
Bromoform	75-25-2	<1	<1
1,1-Dichloroethene	75-35-4	<1	<1
Acetyl Chloride	75-36-5	1-5	1-5
Nitromethane	75-52-5	<1	<1
1,2-Epoxypropane	75-56-9	1-5	1-5
Tetramethylammonium Hydroxide 25%	75-59-2	>480	>240
Dimethyl Sulfate	77-78-1	>10	>10
Citric Acid 30%	77-92-9	>480	>240
Citric Acid 99%	77-92-9	>480	>240
Citric Acid 50%	77-92-9	>480	>240
Citric Acid 75%	77-92-9	>480	>240
2-Butanol	78-83-1	>480	>240
Dichloropropane, 1,2-	78-87-5	1-5	6-10
2-Butanone	78-93-3	1-5	1-5
Ethylene, Trichloride	79-01-6	1-5	6-10
2-Propeneamide 50%	79-06-1	>480	>240
2-Propeneamide 98%	79-06-1	>480	>240
2-Propenoic Acid	79-10-7	>30	NT
Chloroacetic Acid 80%	79-11-8	>480	>240
Chloroacetic Acid 70%	79-11-8	>480	>240
Acetate, Methyl	79-20-9	1-5	1-5
PERACETIC ACID 39%	79-21-0	>10	NT
Methacrylic Acid 99%	79-41-4	>10	NT
Nitro Propane	79-46-9	1-5	1-5
Methacrylate, Methyl	80-62-6	6-10	6-10

DBP	84-74-2	>120	>120
Vinyl Pyrrolidinone	88-12-0	1-5	1-5
Dichlorobenzene O-	95-50-1	1-5	1-5
2-Aminotoluene	95-53-4	>30	>30
Pseudocumene	95-63-6	>10	>10
Butanone Oxime	96-29-7	>480	>240
Butyl Methacrylate	97-88-1	>60	>60
2-Ethylbutyl alcohol	97-95-0	>480	>240
2-Furaldehyde	98-01-1	1-5	1-5
(1-Methylethyl)benzene	98-82-8	1-5	1-5
1-Phenylethanone	98-86-2	1-5	1-5
Nitrobenzene	98-95-3	1-5	1-5
Benzene, Ethyl	100-41-4	>10	>10
Benzene, Vinyl	100-42-5	6-10	6-10
Alcohol, Benzyl	100-51-6	6-10	>10
Benzaldehyde	100-52-7	1-5	1-5
2,2',2''-Nitrilotriethanol	102-71-6	>480	>240
±)-2-(Chloromethyl)oxiran	106-89-8	6-10	6-10
1,2-Dichloroethane	107-06-2	1-5	1-5
Acrylonitrile	107-13-1	1-5	1-5
1,2-Diaminoethane	107-15-3	>30	>30
2-Propen-1-ol	107-18-6	>10	>30
1,2-Ethandiol	107-21-1	>480	>240
Methyl Propyl Ketone	107-87-9	1-5	1-5
1-methoxy-2-propanol	107-98-2	>60	>60
Acetate, Vinyl	108-05-4	1-5	1-5
2-Pentanone, Methyl-	108-10-1	>10	>10
Acetate, Isopropyl	108-21-4	1-5	6-10
PROPYLENE GLYCOL MONOMETHYL ETHER ACETATE	108-65-6	>10	>30
2,6-Dimethyl-4-Heptanone	108-83-8	>120	>120
Benzene, Methyl	108-88-3	6-10	6-10
Benzene Chloride	108-90-7	1-5	1-5
Cyclohexanol	108-93-0	>480	>240
Cyclohexanone	108-94-1	>10	>10
Carbolic Acid	108-95-2	>120	>120
Carbolic Acid 89%	108-95-2	>60	>60
Carbolic Acid 10%	108-95-2	>120	>120

Dimethyl Propaneamide, N,N'	109-55-7	6-10	6-10
Acetate, Propyl	109-60-4	1-5	6-10
Pentane	109-66-0	>480	>240
1-Aminobutane	109-73-9	6-10	6-10
DEA	109-89-7	>10	>30
Diethylene Oxide	109-99-9	1-5	1-5
Hexane	110-54-3	>480	>240
Cyclohexane	110-82-7	>480	>240
PYRIDINE	110-86-1	1-5	1-5
Diethylene oximide	110-91-8	1-5	1-5
1,5-Pentanedial 50%	111-30-8	>60	>240
2,2-iminodiethanol	111-42-2	>30	>60
Diethylene Glycol	111-46-6	>480	>240
n-Octane	111-65-9	>480	>240
2-Butoxyethanol	111-76-2	>120	>120
n-Octanol	111-87-5	>480	>240
Oleic Acid	112-80-1	>480	>240
1,2,4-Trichlorobenzene	120-82-1	<1	<1
TRIETHYLAMINE	121-44-8	>10	>30
Dipropyl Ketone	123-19-3	1-5	1-5
4-Hydroxy-4-methyl-2-pentanone	123-42-2	1-5	1-5
3-Methyl-1-butanol	123-51-3	>480	>240
2,4-Pentanedione	123-54-6	1-5	1-5
Butyl Acetate	123-86-4	1-5	6-10
1,4-Dioxane	123-91-1	1-5	1-5
3-Methylbutyl Ethanoate	123-92-2	1-5	1-5
Dimethylamine 99%	124-40-3	1-5	1-5
Dimethylamine 40%	124-40-3	>480	>240
PERC	127-18-4	>30	>120
Dimethylacetamide N,N-	127-19-5	>10	>30
Butyl Acrylate	141-32-2	>10	>30
2-Aminoethanol	141-43-5	>60	>60
Ethyl Acetate	141-78-6	1-5	6-10
Heptane	142-82-5	>480	>240
Butoxytriglycol	143-22-6	>30	>30
OXALIC ACID (s) 99%	144-62-7	>480	>240
Calcium Carbonate (s) 99%	471-34-1	>480	>240

NINHYDRIN	485-47-2	>480	>240
Trimethyl Phosphate	512-56-1	6-10	NT
2,2,4-Trimethyl Pentane	540-84-1	>480	>240
3-Methyl-2-Butanone	563-80-4	6-10	6-10
Ethyl Propyl Ketone	589-38-8	1-5	1-5
Butyl Ethylene	592-41-6	>480	>240
Amyl Acetate	628-63-7	1-5	1-5
Methyl Pyrrolidone, N-	872-50-4	>30	>30
2-Bromoethyl Acetate	927-68-4	<1	<1
Hexamethyldisilazane	999-97-3	>480	>240
3,8-Diamino-5-ethyl-6-phenylphenanthridinium bromide 5%	1239-45-8	>480	>240
3,8-Diamino-5-ethyl-6-phenylphenanthridinium bromide 1%	1239-45-8	>480	>240
3,8-Diamino-5-ethyl-6-phenylphenanthridinium bromide 95%	1239-45-8	>480	>240
3,8-Diamino-5-ethyl-6-phenylphenanthridinium bromide 10%	1239-45-8	>480	>240
Calcium Hydroxide (s) 95%	1305-62-0	>480	>240
Iron Oxide (s) 99%	1309-37-1	>480	>240
Caustic Potash 45%	1310-58-3	>480	>240
Caustic Potash 30%	1310-58-3	>480	>240
Caustic Potash 10%	1310-58-3	>480	>240
Caustic Potash 20%	1310-58-3	>480	>240
Caustic Potash 99%	1310-58-3	>480	>240
Caustic Soda 40%	1310-73-2	>480	>240
Caustic Soda 10%	1310-73-2	>480	>240
Caustic Soda 30%	1310-73-2	>480	>240
Caustic Soda 98%	1310-73-2	>480	>240
Caustic Soda 20%	1310-73-2	>480	>240
Caustic Soda 50%	1310-73-2	>480	>240
Cresols	1319-77-3	>30	>30
Divinyl Benzene	1321-74-0	1-5	1-5
dimethyl benzene	1330-20-7	>10	>10
Triresyl Phosphate	1330-78-5	>120	>120
Chromic Acid Solution 50%	1333-82-0	>10	NT
Chromic Acid Solution 99%	1333-82-0	>480	>240
Ammonia Solution 29%	1336-21-6	>60	NT
Ammonia Solution 10%	1336-21-6	>240	>240
Ammonia Solution 32%	1336-21-6	>60	NT
Ammonia Solution 25%	1336-21-6	>120	NT

Gallotannin 50%	1401-55-4	>480	>240
Gallotannin 95%	1401-55-4	>480	>240
1-Propoxy-2-propanol	1569-01-3	>60	>60
Methyl-Tert-Butyl Ether	1634-04-4	>120	>120
Butoxypropanol	5131-66-8	>240	>240
D-Limonene	5989-27-5	>30	>30
Aluminum Chloride (s) 98%	7446-70-0	>480	>240
Potassium Chloride (s) 99%	7447-40-7	>480	>240
Hydrochloric Acid 37%	7647-01-0	>480	>240
Hydrochloric Acid 10%	7647-01-0	>480	>240
Muriatic Acid 20%	7647-01-0	>480	>240
Muriatic Acid 32%	7647-01-0	>480	>240
Sodium Chloride (s) 99%	7647-14-5	>480	>240
Phosphoric Acid 10%	7664-38-2	>480	>240
Phosphoric Acid 50%	7664-38-2	>480	>240
Phosphoric Acid 85%	7664-38-2	>480	>240
Hydrofluoric Acid 20%	7664-39-3	>480	>240
Hydrofluoric Acid 30%	7664-39-3	>480	>240
Hydrofluoric Acid 10%	7664-39-3	>480	>240
Hydrofluoric Acid 48%	7664-39-3	>60	NT
Hydrofluoric Acid 40%	7664-39-3	>240	>240
Sulfuric Acid 96%	7664-93-9	>120	NT
Sulfuric Acid 10%	7664-93-9	>480	>240
Sulfuric Acid 70%	7664-93-9	>480	>240
Battery Acid 47%	7664-93-9	>480	>240
Sulfuric Acid 93%	7664-93-9	>120	NT
Sulfuric Acid 50%	7664-93-9	>480	>240
Sulfuric Acid 25%	7664-93-9	>480	>240
Bleach: Sodium Hypochlorite 6%	7681-52-9	>480	>240
Bleach: Sodium Hypochlorite 12%	7681-52-9	>480	>240
Nitric Acid 70%	7697-37-2	>10	NT
Nitric Acid 65%	7697-37-2	>30	NT
Nitric Acid 10%	7697-37-2	>480	>240
Nitric Acid 23%	7697-37-2	>480	>240
Nitric Acid 50%	7697-37-2	>120	NT
Nitric Acid 35%	7697-37-2	>480	>240
Hydrogen Peroxide 3%	7722-84-1	>480	>240

Hydrogen Peroxide 6%	7722-84-1	>480	>240
Hydrogen Peroxide 10%	7722-84-1	>480	>240
Hydrogen Peroxide 30%	7722-84-1	>480	>240
Bromine	7726-95-6	<1	<1
Iron Chloride Solution 98%	7758-94-3	>480	>240
Iron Chloride Solution 45%	7758-94-3	>480	>240
Chlorine (Gas)	7782-50-5	>480	>240
Iron Sulfate (s) 99%	7782-63-0	>480	>240
Hydroxylamine 50%	7803-49-8	>480	>240
Kerosene	8008-20-6	>480	>240
Mineral Oil - Light	8012-95-1	>480	>240
Naphtha, VM&P	8030-30-6	>480	>240
Ligroin	8032-32-4	>480	>240
Dry Cleaning Mineral Spirits	8052-41-3	>480	>240
Hydrobromic Acid 48%	10035-10-6	>480	>240
Boric acid (s) 99%	10043-35-3	>480	>240
Calcium Chloride (s) 96%	10043-52-4	>480	>240
Tetrachloropropene	10436-39-2	>10	>30
Ammonium Fluoride 40%	12125-01-8	>480	>240
2-Chloro-2-Oxoethyl Acetate	13831-31-7	1-5	1-5
Talc (s) 99%	14807-96-6	>480	>240
Fluoboric Acid 49%	16872-11-0	>60	NT
Pentachloropropane	23153-23-3	>30	>30
Antimony Tributrylate 95%	53856-17-0	>480	>240
Dry cleaning safety solvent	64475-85-0	>480	>240
Distillates (petroleum), hydrotreated light	64742-47-8	>480	>240
Mineral Spirits (White Spirits Type 3)	64742-48-9	>480	>240
Naphtha, VM & P	64742-49-0	>480	>240
Kerosene (hydrosulfurized)	64742-81-0	>480	>240
Mineral Spirits (White Spirits Type 0)	64742-88-7	>480	>240
Naphtha, heavy aromatic	64742-94-5	>10	>30
Naphtha, light aromatic	64742-95-6	>30	>60
Diesel Oil	68334-30-5	>480	>240
Kerosene (Fuel Oil # 2)	68476-30-2	>480	>240
Diesel Fuel #2	68476-34-6	>480	>240
Mineral Spirits (odorless)	68551-17-7	>480	>240
Denacol EX-521	118549-88-5	>480	>240

BDT=BREAKTHROUGH DETECTION TIME

THE LEVEL (0 TO 6) INDICATES THE TIME REQUIRED FOR DIFFERENT CHEMICALS TO PERMEATE THROUGH THE GLOVE.

TTL : TOTAL IMMERSION CHEMICAL PERMEATION BREAKTHROUGH TIME.

INT : INTERMITTENT CONTACT CHEMICAL PERMEATION BREAKTHROUGH TIME, ONE MINUTE IMMERSION OUT OF EVERY TEN, REPEATEDLY.

Warranty Limitations and Disclaimer Use

This information is provided solely as a convenience to help you evaluate our gloves in the end-user's particular application. It is the responsibility of the purchaser and/or user to determine the level of toxicity of the materials to be handled and to select the proper glove suitable for a particular application. The information provided reflects laboratory performance of gloves under carefully controlled conditions. SHOWA makes no guarantee of results and assumes no obligation or liability in connection with this information.



COPYRIGHT © 2009-2021 SHOWA, INC. ALL RIGHTS RESERVED