

Chemical Compatibility Guide for: SHOWA 6780R Neoprene Coated Gloves

The guide on the following page(s) was provided by the supplier. New Pig Corporation assumes no responsibility, obligation, or liability in conjunction with the use or misuse of the information.



New Pig

One Pork Avenue
Tipton, PA 16684-0304

newpig.com

North America: **1-800-468-4647**

Europe: **+31 (0)76 596 92 50**

China: **+86-21-400 921 5178**

PIG, PIG logo are registered trademarks in USA and other countries. See tm.newpig.com


UK: **0800 919 900**

Outside North America: **+1-814-684-0101**



6780R

Material Neoprene LENGTH 12 in. / 305mm

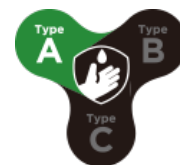

CHEMICAL PERMEATION

| CHEMICAL NAME | CAS NUMBER | DEGRADATION RATING | | | | BDT | |
|-----------------------------|------------|--------------------|-----|-----|------|------------------|-------------------|
| | | 5m | 30m | 60m | 240m | TTL ASTM F739 | INT ASTM F1383 |
| Formaldehyde 37% | 50-00-0 | E | E | E | E | >480 | >240 |
| 2-Hydroxypropionic acid 85% | 50-21-5 | E | E | E | E | >480 | >240 |
| Carbon Tet | 56-23-5 | E | F | P | NR | >60 | >240 |
| 1,2-Propanediol | 57-55-6 | E | E | E | E | >480 | >240 |
| Diethyl Ether | 60-29-7 | E | G | G | G | >10 | >10 |
| Aminobenzene | 62-53-3 | E | E | G | G | >30 | >240 |
| Ethanol | 64-17-5 | E | E | E | E | >480 | >240 |
| Formic Acid 90% | 64-18-6 | E | E | E | E | >480 | >240 |
| Formic Acid | 64-18-6 | E | E | E | E | >480 | >240 |
| Acetic Acid 84% | 64-19-7 | E | E | E | E | >480 | >240 |
| Methanol | 67-56-1 | E | E | E | E | >60 | >240 |
| 2-Propanol | 67-63-0 | E | E | E | E | >480 | >240 |
| 2-Propanone | 67-64-1 | E | E | E | E | >30 | >30 |
| Chloroform | 67-66-3 | G | P | NR | NR | >10 | >30 |
| Dimethylsulfoxide (DMSO) | 67-68-5 | E | E | E | E | >480 | >240 |
| Dimethyl Formamide | 68-12-2 | E | E | E | G | >60 | >60 |
| n-Propanol | 71-23-8 | E | E | E | E | >480 | >240 |
| Butanol | 71-36-3 | E | E | E | E | >480 | >240 |
| Alcohol, Amyl | 71-41-0 | E | E | E | E | >480 | >240 |
| Benzene | 71-43-2 | G | P | P | P | >10 | >30 |
| 1,1,1-Trichloroethane | 71-55-6 | E | F | P | NR | >30 | >120 |
| Chloride, Methyl (GAS) | 74-87-3 | E | E | E | E | >60 | NT |
| Iodide, Methyl | 74-88-4 | P | NR | NR | NR | NR | >10 |
| Chloride, Vinyl (GAS) | 75-01-4 | E | E | E | E | 6-10 | NT |
| Acetonitrile | 75-05-8 | E | E | E | E | >60 | >60 |
| Acetaldehyde | 75-07-0 | E | E | E | E | 1-5 | >10 |

| | | | | | | | |
|---------------------------------------|----------|----|----|----|----|------|------|
| Chloride, Methylene | 75-09-2 | G | NR | NR | NR | 1-5 | >10 |
| Carbon Disulfide | 75-15-0 | G | NR | NR | NR | NR | NT |
| 1,2-Epoxy Ethane (gas) | 75-21-8 | E | E | E | E | >10 | NT |
| Bromoform | 75-25-2 | P | NR | NR | NR | NR | >60 |
| 1,1-Dichloroethene | 75-35-4 | F | P | NR | NR | NR | >10 |
| Nitromethane | 75-52-5 | E | E | E | E | >120 | >120 |
| 1,2-Epoxypropane | 75-56-9 | G | G | F | F | >10 | >10 |
| 1,1,2-Trichloro-1,2,2-trifluoroethane | 76-13-1 | E | E | E | E | >480 | >240 |
| Dimethyl Sulfate | 77-78-1 | G | G | G | F | >10 | >60 |
| Citric Acid 30% | 77-92-9 | E | E | E | E | >480 | >240 |
| 2-Butanol | 78-83-1 | E | E | E | E | >480 | >240 |
| 2-Butanone | 78-93-3 | E | G | G | F | >30 | >60 |
| Ethylene, Trichloride | 79-01-6 | G | P | NR | NR | >10 | >10 |
| 2-Propeneamide(s) 99% | 79-06-1 | E | E | E | E | >480 | >240 |
| 2-Propeneamide 50% | 79-06-1 | E | E | E | E | >480 | >240 |
| Acetate, Methyl | 79-20-9 | E | E | G | G | >10 | >30 |
| Nitro Propane | 79-46-9 | E | E | G | G | >60 | >120 |
| Methacrylate, Methyl | 80-62-6 | E | G | F | P | >10 | >30 |
| DBP | 84-74-2 | E | E | E | E | >480 | >240 |
| Pentachlorophenol 5% | 87-86-5 | E | E | E | E | >480 | >240 |
| Vinyl Pyrrolidinone | 88-12-0 | NT | NT | NT | NT | >240 | >240 |
| Biphenyl 27% | 92-52-4 | E | G | G | P | >480 | >240 |
| Dichlorobenzene O- | 95-50-1 | G | P | P | NR | NR | >10 |
| 2-Aminotoluene | 95-53-4 | E | E | G | F | >120 | >240 |
| 1,2,4 - Trimethyl Benzene 98% | 95-63-6 | E | E | P | NR | >60 | >60 |
| Butanone Oxime | 96-29-7 | E | E | E | E | >480 | >240 |
| 2-Ethylbutyl alcohol | 97-95-0 | E | E | E | E | >480 | >240 |
| 2-Furaldehyde | 98-01-1 | E | E | E | E | >60 | >240 |
| Benzene, Trifluoromethyl | 98-08-8 | G | G | F | P | >30 | >30 |
| Butyl Toluene, p-Tert | 98-51-1 | E | E | E | F | >120 | >240 |
| 1-chloro-4-[trifluoromethyl]Benzene | 98-56-6 | G | F | P | P | >120 | >480 |
| (1-Methylethyl)benzene | 98-82-8 | G | NR | NR | NR | >60 | >240 |
| 1-Phenylethanone | 98-86-2 | E | G | G | P | >480 | >240 |
| Cyclohexyldimethylamine | 98-94-2 | NT | NT | NT | NT | >60 | NT |
| Nitrobenzene | 98-95-3 | E | F | F | NR | >120 | >120 |
| Benzene, Ethyl | 100-41-4 | G | F | P | NR | >30 | >30 |
| Benzene, Vinyl | 100-42-5 | G | P | NR | NR | NR | >30 |

| | | | | | | | |
|-----------------------------------|----------|----|----|----|----|------|------|
| Alcohol, Benzyl | 100-51-6 | E | E | E | E | >480 | >240 |
| Benzaldehyde | 100-52-7 | E | E | E | E | >60 | >60 |
| 4,4'-MDI, | 101-68-8 | NT | NT | NT | NT | >480 | >240 |
| 4,4-Methylenedianiline | 101-77-9 | E | E | E | E | >480 | >240 |
| Oxybisbenzene,1,1- (Dowtherm) 73% | 101-84-8 | E | G | G | P | >480 | >240 |
| 2,2',2''-Nitrilotriethanol | 102-71-6 | E | E | E | E | >480 | >240 |
| Methyl Isobutyl Ketoxime | 105-44-2 | NT | NT | NT | NT | >480 | >240 |
| Dimethylpiperazine | 106-58-1 | NT | NT | NT | NT | >60 | NT |
| ±)-2-(Chloromethyl)oxiran | 106-89-8 | E | G | G | F | >10 | >60 |
| 1,3-Butadiene | 106-99-0 | E | E | E | E | >30 | NT |
| 1,2-Dichloroethane | 107-06-2 | E | F | P | P | >10 | >240 |
| Acrylonitrile | 107-13-1 | E | E | E | E | >10 | >30 |
| 1,2-Diaminoethane 99% | 107-15-3 | E | E | E | E | >480 | >240 |
| 2-Propen-1-ol | 107-18-6 | E | E | E | E | >120 | >240 |
| 1,2-Ethandiol | 107-21-1 | E | E | E | E | >480 | >240 |
| Methyl Propyl Ketone | 107-87-9 | E | E | G | F | >10 | NT |
| 1-methoxy-2-propanol | 107-98-2 | E | E | E | P | >480 | >240 |
| Acetate, Vinyl | 108-05-4 | E | G | P | P | >10 | >30 |
| 2-Pentanone, Methyl- | 108-10-1 | E | E | G | F | >30 | >60 |
| Acetate, Isopropyl | 108-21-4 | E | G | G | F | >10 | NT |
| 2,6-Dimethyl-4-Heptanone | 108-83-8 | E | E | E | E | >480 | >240 |
| Benzene, Methyl | 108-88-3 | G | F | P | NR | >10 | >30 |
| Benzene Chloride | 108-90-7 | G | P | NR | NR | NR | >30 |
| Cyclohexanol | 108-93-0 | E | E | E | E | >480 | >240 |
| Cyclohexanone | 108-94-1 | E | G | F | NR | >60 | >60 |
| Carbolic Acid 89% | 108-95-2 | E | E | E | E | >60 | >240 |
| Dimethyl Propaneamide, N,N'- | 109-55-7 | NT | NT | NT | NT | >60 | NT |
| Acetate, Propyl | 109-60-4 | E | G | F | P | >30 | >60 |
| Pentane | 109-66-0 | E | E | E | E | >60 | >120 |
| 1-Aminobutane | 109-73-9 | G | P | NR | NR | NR | NT |
| DEA | 109-89-7 | E | F | F | P | >10 | >30 |
| Diethylene Oxide | 109-99-9 | E | F | P | NR | >10 | >10 |
| Hexane | 110-54-3 | E | E | E | E | >120 | >240 |
| 2-Ethoxyethanol | 110-80-5 | E | E | E | G | >120 | >240 |
| Cyclohexane | 110-82-7 | E | E | E | E | >120 | >240 |
| PYRIDINE | 110-86-1 | E | F | P | P | NR | >30 |
| Diethylene oximide | 110-91-8 | E | E | G | F | >30 | >120 |

| | | | | | | | |
|---|-----------|---|---|----|----|------|------|
| 1,5-Pentanedial 50% | 111-30-8 | E | E | E | E | >480 | >240 |
| 2,2-iminodiethanol | 111-42-2 | E | E | E | E | >480 | >240 |
| Diethylene Glycol | 111-46-6 | E | E | E | E | >480 | >240 |
| 2-Butoxyethanol | 111-76-2 | E | E | E | E | >480 | >240 |
| Diethylene Glycol Monomethyl Ether | 111-77-3 | E | E | E | E | >480 | >240 |
| n-Octanol | 111-87-5 | E | E | E | E | >480 | >240 |
| Ethylene Glycol Monobutyl Ether Acetate | 112-07-2 | E | E | F | F | >480 | >240 |
| 1-Acetoxy-2-butoxyethane | 112-15-2 | E | E | E | G | >480 | >240 |
| Ethylene Glycol Monoethyl Ether | 112-25-4 | E | E | E | E | >480 | >240 |
| Butoxydiglycol | 112-34-5 | E | E | E | E | >480 | >240 |
| Methyltriglycol | 112-35-6 | E | E | E | E | >480 | >240 |
| Ethoxytriglycol | 112-50-5 | E | E | E | E | >480 | >240 |
| Diethylene Glycol Monohexyl Ether | 112-59-4 | E | E | E | E | >480 | >240 |
| Oleic Acid 98% | 112-80-1 | E | E | E | E | >480 | >240 |
| 1,2,4-Trichlorobenzene | 120-82-1 | E | F | P | NR | NR | >60 |
| 2,4-Dinitrotoluene 40% | 121-14-2 | E | E | G | F | >240 | >240 |
| 4-Hydroxy-4-methyl-2-pentanone | 123-42-2 | E | E | E | E | >480 | >240 |
| 3-Methyl-1-butanol | 123-51-3 | E | E | E | E | >480 | >240 |
| Butyl Acetate | 123-86-4 | E | G | F | P | >30 | >30 |
| 1,4-Dioxane | 123-91-1 | E | G | G | P | >60 | >60 |
| 3-Methylbutyl Ethanoate | 123-92-2 | E | G | G | P | >60 | >60 |
| PERC | 127-18-4 | G | P | NR | NR | >30 | >60 |
| Dimethylacetamide N,N- | 127-19-5 | E | E | E | E | >60 | >240 |
| Butyl Acrylate | 141-32-2 | E | G | G | F | >30 | >60 |
| 2-Aminoethanol | 141-43-5 | E | E | E | E | >480 | >240 |
| Ethyl Acetate | 141-78-6 | E | G | G | F | >10 | >60 |
| Heptane | 142-82-5 | E | E | E | E | >480 | >240 |
| Butoxytriglycol | 143-22-6 | E | E | E | E | >480 | >240 |
| Dichlorotrifluoroethane | 306-83-2 | E | E | E | E | >60 | NT |
| 3,4-DCBTF | 328-84-7 | G | F | P | NR | >240 | >240 |
| 2,2,4-Trimethyl Pentane | 540-84-1 | E | E | E | E | >480 | >240 |
| 4-Methyl-meta-phenylene diisocyanate | 584-84-9 | E | E | E | G | >120 | >240 |
| Butyl Ethylene | 592-41-6 | E | E | E | F | >30 | >30 |
| Amyl Acetate | 628-63-7 | E | G | G | P | >60 | >240 |
| Methyl Pyrrolidone, N- | 872-50-4 | E | E | E | G | >120 | >240 |
| 2-Bromoethyl Acetate | 927-68-4 | E | E | G | G | >480 | >240 |
| Glyphosate Roundup 95% | 1071-83-6 | E | E | E | E | >10 | NT |

| | | | | | | | |
|--------------------------------|-----------|----|----|----|----|------|------|
| Caustic Potash 45% | 1310-58-3 | E | E | E | E | >480 | >240 |
| Caustic Soda 50% | 1310-73-2 | E | E | E | E | >480 | >240 |
| Cresols | 1319-77-3 | E | E | E | E | >480 | >240 |
| Divinyl Benzene | 1321-74-0 | E | F | P | NR | NR | >60 |
| dimethyl benzene | 1330-20-7 | G | P | P | NR | >30 | >240 |
| Tricresyl Phosphate | 1330-78-5 | E | E | E | E | >480 | >240 |
| Chromic Acid Solution 50% | 1333-82-0 | E | E | E | E | >480 | >240 |
| Ammonia Solution 29% | 1336-21-6 | E | E | E | E | >480 | >240 |
| Gallotannin 50% | 1401-55-4 | E | E | E | E | >480 | >240 |
| 1-Propoxy-2-propanol | 1569-01-3 | E | E | E | E | >480 | >240 |
| Methyl-Tert-Butyl Ether | 1634-04-4 | E | E | G | P | >30 | >30 |
| Dichlorofluoroethane | 1717-00-6 | E | G | F | F | >60 | NT |
| Dibutyl phenyl phosphate | 2528-36-1 | E | E | G | F | >480 | >240 |
| 2-Propoxyethanol | 2807-30-9 | E | E | E | E | >480 | >240 |
| Butoxypropanol | 5131-66-8 | E | E | E | E | >480 | >240 |
| D-Limonene | 5989-27-5 | E | E | G | F | >60 | >240 |
| 2,2'-dimorpholinodiethylether | 6425-39-4 | NT | NT | NT | NT | >120 | NT |
| 2-(2-Propoxyethoxy)ethanol | 6881-94-3 | E | E | E | E | >480 | >240 |
| Hydrochloric Acid 10% | 7647-01-0 | E | E | E | E | >480 | >240 |
| Muriatic Acid | 7647-01-0 | E | E | E | E | >480 | >240 |
| Hydrochloric Acid 37% | 7647-01-0 | E | E | E | E | >480 | >240 |
| Phosphoric Acid 85% | 7664-38-2 | E | E | E | E | >480 | >240 |
| Hydrofluoric Acid 48% | 7664-39-3 | E | E | E | E | >480 | >240 |
| Hydrofluoric Acid | 7664-39-3 | E | E | E | E | >120 | NT |
| Ammonia (Gas) | 7664-41-7 | E | E | E | E | >10 | NT |
| Battery Acid 47% | 7664-93-9 | E | E | E | E | >480 | >240 |
| Bleach: Sodium Hypochlorite 6% | 7681-52-9 | E | E | E | E | >480 | >240 |
| Nitric Acid 23% | 7697-37-2 | E | E | E | E | >480 | >240 |
| Nitric Acid 70% | 7697-37-2 | E | E | E | E | >480 | >240 |
| Hydrogen Peroxide 30% | 7722-84-1 | E | E | E | E | >480 | >240 |
| Chlorine (Gas) | 7782-50-5 | E | E | E | E | >480 | >240 |
| Olive Oil | 8001-25-0 | E | E | E | E | NT | NT |
| Corn Oil | 8001-30-7 | E | E | E | E | NT | NT |
| Gasoline (unleaded) | 8006-61-9 | E | E | E | F | >30 | >240 |
| Fir Oil | 8006-64-2 | E | E | E | E | >240 | >240 |
| Aqua Regia | 8007-56-5 | E | E | E | E | >480 | >240 |
| Kerosene | 8008-20-6 | E | E | E | E | >120 | >240 |

| | | | | | | | |
|-------------------------------|------------|----|----|----|----|------|------|
| Mineral Oil - Light | 8012-95-1 | E | E | E | E | NT | NT |
| Ligroin | 8032-32-4 | E | E | E | E | >60 | >240 |
| Dry Cleaning Mineral Spirits | 8052-41-3 | E | E | E | E | >480 | >240 |
| Polychlorinated Biphenyls 50% | 11097-69-1 | E | G | F | P | >120 | NT |
| 2-Chloro-2-Oxoethyl Acetate | 13831-31-7 | E | E | E | G | >480 | >240 |
| Fluoboric Acid 49% | 16872-11-0 | E | E | E | E | >480 | >240 |
| 1-Chloro-2-Methyl Benzene | 25168-05-2 | F | P | NR | NR | >60 | >30 |
| Butyl Dipropasol Solvent | 29911-28-2 | E | E | E | E | >480 | >240 |
| Antimony Tributyratate 95% | 53856-17-0 | NT | NT | NT | NT | >480 | >240 |
| Dry cleaning safety solvent | 64475-85-0 | E | E | E | E | >480 | >240 |
| Diesel Fuel | 77650-28-3 | E | E | E | E | >480 | >240 |

DEGRADATION RATING

E=EXCELLENT; G=GOOD; F=FAIR; P=POOR; NR= NOT RECOMMENDED; NT=NOT TESTED

BDT=BREAKTHROUGH DETECTION TIME

THE LEVEL (0 TO 6) INDICATES THE TIME REQUIRED FOR DIFFERENT CHEMICALS TO PERMEATE THROUGH THE GLOVE.

TTL : TOTAL IMMERSION CHEMICAL PERMEATION BREAKTHROUGH TIME.

INT : INTERMITTENT CONTACT CHEMICAL PERMEATION BREAKTHROUGH TIME, ONE MINUTE IMMERSION OUT OF EVERY TEN, REPEATEDLY.

Warranty Limitations and Disclaimer Use

This information is provided solely as a convenience to help you evaluate our gloves in the end-user's particular application. It is the responsibility of the purchaser and/or user to determine the level of toxicity of the materials to be handled and to select the proper glove suitable for a particular application. The information provided reflects laboratory performance of gloves under carefully controlled conditions. SHOWA makes no guarantee of results and assumes no obligation or liability in connection with this information.