


INSTALLATION INSTRUCTION

Multifunction service cart

Installation diagram

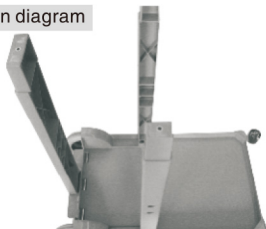


1

Put the base plate on the floor then install the three support beams into the corresponding quadrate spigots and hammer them hard



2

Overturn the base plate and screw down the support beams from their bottoms with M6*20 screws.

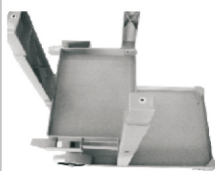


3

Install the middle plate and screw down the support beams from their outsides with M6*35 screws to fix the plate.



4

Install the support beams into the upper plate and hammer them hard, then screw them down to fix them.

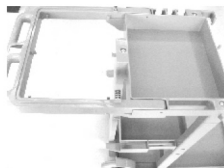

5


Install the handle into the upper plate then screw them down from both inside and outside to fix it.



6

Hang the bag and install the cover.

7

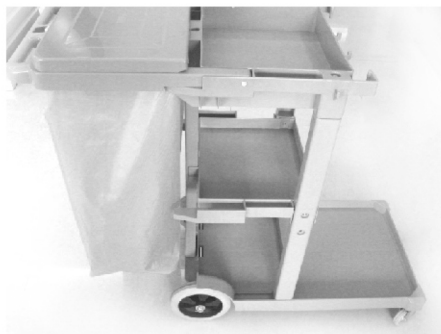

Product installation is complete, the above chart